

eztok

Automatic PTP Deblister



FAST AND EASY-TO-USE PTP DEBLISTERING

With a simple lever control, the interval between the capsules / tablets on a PTP can be easily adjusted in a batch. Also, up to 7 rows of medicines can be deblistered at a time to speed up the process.



COMPATIBLE WITH VARIOUS TYPES OF PTPS

Roller compression technology minimizes damages to medicine. Various PTP types including tablets, capsules, and soft capsules are supported for easy and convenient deblistering.

※ Restrictions may apply to select PTPs depending on its size, packaging arrangement, softness of tablet.



HYGIENIC MEDICINE MANAGEMENT

Deblistered tablets go straight into the collection tray without user's manual intervention, and a filtered double-layer tray effectively filters out powder and aluminum foils from the tablets in the process of deblistering to keep the process clean and hygienic.

Model Name	JV-DB30
Dimensions(W*D*H)	485*205*285mm
Dimensions	About 15kg
Power consumption	17W
Power Supply	110 ~ 240V, 50/60Hz
Operation Temperature/Humidity	0~40℃, 10~80%

※ Product exterior and specifications are subject to change due to the company's research and development results without any prior notice.

※ All information contained herein may not be duplicated, copied, altered, or quoted without the express written consent of JVM.

Automatic Tablet Cutting System



AUTOMATED CUTTING AND COUNTING FOR VARIOUS SHAPES OF TABLETS

Automatically identifies, cuts and counts different shapes of tablets including round, oval and oblong. without cutting to go through the registration process.

※ ezCUT may not support tablets in special shape or smaller than 2mm, and soft tablets.



TABLET COUNTING

Allows to count tablets with a simple operation without the need of canister.




CLEAN FILLING

Offers a clean and safe prescription environment with automated cutting.



USER-FRIENDLY INTUITIVE CONTROL PANEL

The intuitive touchscreen control panel helps to increase the work efficiency.

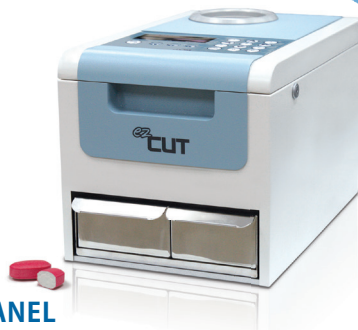

Model	JV-EC10
Dimensions(WxDxHmm)	238x406x250
Weight	About 15kg
Cutting Speed	Max. 20 tablets / minute
Counting Speed	70 tablets / minute
Max. Cutting Size	Round tablet: 15x7mm (WxD) / Oval tablet: 20x10x7mm (WXDXH)
Display	LCD panel (192x64 dots, black & white)
Power consumption	5W (Max. 80W)
Power supply	100-240V, ~50/60Hz

※ Product exterior and specifications are subject to change due to the company's research and development results without any prior notice.

※ All information contained herein may not be duplicated, copied, altered, or quoted without the expression written consent of JVM.



Dispensing Boxes

Patients sachets can be safely stored in Dispy's (Dispensing Boxes). Each box contains 26 Dispy's. Handy and very light.